Specification and Verification of Hardware

VHDL 1

Original by Magnus Björk

Computing Science
Chalmers University of Technology

The course

- Course team:
  - Mary Sheeran (kursansvarig)
  - Dennis Walter
  - Emil Axelsson
- Guest lecturers:
  - Jiri Gaisler (Gaisler Research)
  - Emily Shriver (Intel)

About the course

- Check in often at: http://www.cs.chalmers.se/Cs/Grundutb/Kurser/svh/
- Two halves: VHDL part and Lava part.
- Each half includes one lab and one take home exam.
- Written exam in then end
- Sign up for one lab account each.

You may solve the labs in pairs, but are not allowed to cooperate between the pairs. No cooperation at all on the take home exams (do them individually).

Course Book: Two Options

- Peter Ashenden: **The Designer's Guide to VHDL**
  - Approaches VHDL as any programming language
  - Focuses on simulation.
  - *The* VHDL book used in industry (Ashenden is part of the committee behind the VHDL standard, this book is sometimes seen as a more readable version of the standard.)
- Stefan Sjöholm, Lennart Lindh: **VHDL för konstruktion**
  - Approaches VHDL as a tool for constructing hardware
  - Focuses on synthesis
  - Cheaper and more concise

Overview of the lecture

- A 15 minutes crash course in hardware design
- VHDL

Please interrupt me if you have questions

Fundamental hardware concepts

Gate level

- Can be compared to assembler for software
- We may use:
  - Gates: Not, And, Or, Implies, Multiplexers



  - Memory cells: d-flipflop



  - Components: boxes containing gate-level descriptions

Combinational gate level examples

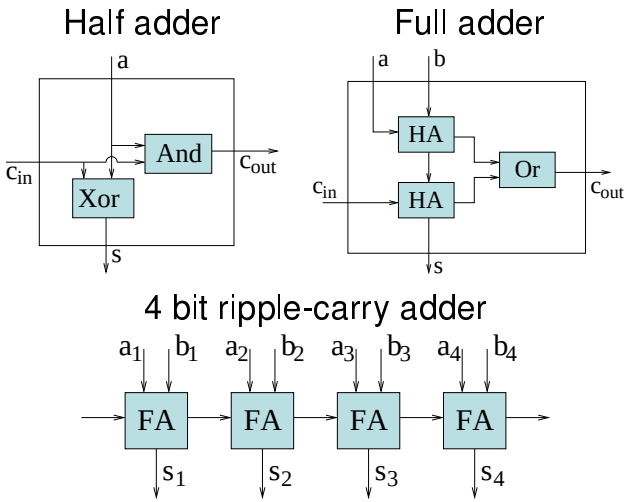

Sequential gate level examples

Oscillator

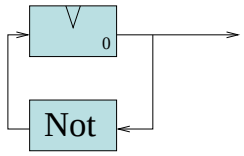

Sequential adder

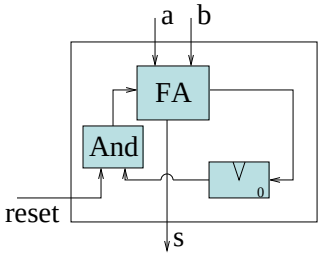

Be careful with

- Feedback **only** through flipflops



- You may split wires, but never join them:

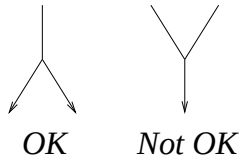

In this course, any wire may only have **one** driver.

Abstraction domains (1)

- Structural domain:
  Circuit described as a composition of sub-circuits

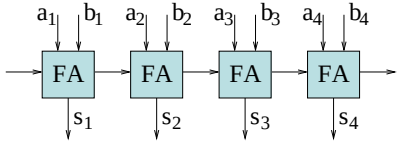

- Behavioral domain:
  Describes **what** the circuit does, **not how** it does it

```
s := a + b;
```


Abstraction domains (2)

- Behavioral is the “desired” domain *(why make more complicated code?)*
- But, behavioral code
  - May not be synthesizable

```
if c /= c'delayed(T) then ...
x <= y / z;
```

    Time-shift and division can be simulated, but not synthesized
  - May lead to inefficient circuit

```
a := b + c;
d := e - f;
```

    Maybe only one adder is needed?

Abstraction domains (3)

- Structural decomposition is usually necessary for getting efficient and synthesizable code
- No design is completely structural
  - Components → Gates → Transistors → Silicon crystals → ...
- Sooner or later we reach the leaves of struct. decomposition. The structural leaves are always described behaviorally.
- What is a suitable level for the leaves?
- Common answer: **Register Transfer Level (RTL)**

Register Transfer Level (1)

- RTL = Gate level, plus:
  - Wires carrying more complex data types (bit-vectors, integers, arrays of integers, ...)
  - Components operating on those types (adders, multipliers, sorters, ...)
  - Registers and memories (generalization of d-flipflop, storing any type)
  - Subcomponents for hierarchical structure
  - Finite state machines (FSMs)
- These components are described **behaviorally**!
  - An adder does not have to be decomposed into full adders
  - A counter (an FSM) does not have to be decomposed into a register and an adder

Register Transfer Level (2)

- Correct timing behavior internally: it should be possible to see from the RTL description what happens in each clock cycle.
- Designer controls overall structure, synthesis tool controls low-level details (RTL synthesis)

Behavioral Level (1)

- Describes **what** the circuit does, **not how** it does it
- Doesn't say anything about the structure of the circuit
- Uses standard programming language concepts such as algorithms, loops, complex data types and processes.
- Shows correct timing behavior externally, but not internally
- Important aspects
  - Must be easy to understand
  - Must be unambiguous
  - Is used as a runnable specification; behavior is compared with RTL implementation during test phase

Behavioral Level (2)

- Used to specify what your circuit does
- Can be discussed with customer as initial step of design
- Can also be used to simulate other parts of the circuitry which are developed by somebody else
- Is probably not synthesizable

Functional Level

- Even higher level than behavioral
- Only describes the function of the circuit
- Not even correct timing behavior
- May use any programming language constructs

Abstraction Levels (1)

Say we want to describe a pipelined sorter for integers:

- **Functional level:** Your favorite sorting algorithm
- **Behavioral level:** The same algorithm, with result delayed a number of clock cycles to get correct timing
- **Register transfer level:** A structural description using comparators, registers, and wires carrying integers. Uses the same sorting method as the final circuit (probably not the same as in previous steps). Two versions:
  - All registers at the end of the datapath
  - Registers distributed in the correct places.

Abstraction Levels (2)

- **Gate level:** An incomprehensible structural description using registers, gates and wires carrying booleans
- **Transistor level:** A structural description using only transistors and wires carrying different voltages

Design process (simplified)

1. Write a specification
2. Write an implementation
3. Verify that your implementation meets the specification
4. If not, are the errors in the specification or the implementation?
   Correct the erroneous one.
5. Repeat step 3-4 until no more errors are found.

Iterative design process

1. Write a (runnable) specification.
2. Do some verification of the specification, to convince yourself that it is correct.
3. Write an implementation on a slightly less abstract level or with more optimizations
4. Verify that the new implementation works like a previous one (perhaps the last implementation, or the specification)
5. Repeat step 3-4 until you have an optimized low level description of your circuit.

If Spec. and Implementation Differs?

If your final design doesn't behave as the behavioral description, you have three options:

1. Change your final design to match the behavioral model
2. Change your behavioral model to match the final design
3. Find out exactly how different they are (this isn't as easy as you think). Determine if they are similar enough, and thoroughly document the differences

First option is preferable, since you don't need to update the contract with your customer. If you discover that the agreed upon behavior was hard to implement, second option is probably best. Third option is usually harder than second.

(Functional) Verification techniques

- Testing: write testbenches, simulate circuit (ModelSim)
- Exhaustive testing: Generally not feasible
- Automated testing: Safelogic Monitor, FoCs, QuickCheck
- Property checking (model checking): Jasper Gold, RuleBase, Solidify, Formality
- Equivalence checking: eCheck, conformal (if 1-1-match of dffs)
- Other methods: Symbolic simulation, Theorem proving, ...

Last three known as *formal verification*

Hardware Description Languages (HDL)

- Why not use C, Ada, or Java for hardware description?
  - They are sequential. Hardware is totally concurrent.
  - We want do be able to describe circuits structurally.
- Different HDLs:
  - VHDL: No 1 in Europe. Based on Ada.
  - Verilog: No 1 in the US. Based on C.
  - Lava: No 1 in CS[1]. Embedded in Haskell.

[1] Department of Computing Science, Chalmers

VHDL

- History
  - VHDL = VHSIC Hardware Description Language (VHSIC = Very High Speed Integrated Circuit)
  - Ordered by US defence department
  - Developed by Intermetrics, IBM and Texas Instruments (1983)
  - Standardized by IEEE (1987, 1993, and 2001) and ANSI (1988)
- Original goals
  - Modelling and simulation
  - Executable and unambiguous specifications
  - Standardized way of describing circuits
- Also used for
  - Synthesis

Entities and Architectures

- Designs are described using a number of modules, consisting of *entities* and *architectures*.
- An **entity** describes the *interface* of a module: names and types of input ports, output ports, generic parameters, etc.
- An **architecture** describes how the module works internally. Corresponds to the implementation or function body in other programming languages.
- Each module has exactly one entity, but may have several architectures (for instance one behavioral and one RTL implementation).

Examples of Entities

```
entity half_adder is
  port ( c_in, a : in bit;
         s, c_out : out bit );
end entity half_adder;
```

```
entity d_flip_flop is
  port ( i, clk : in bit;
         o : out bit );
end entity d_flip_flop;
```

An Entity with an Architecture

```
entity d_flip_flop is
    port ( i, clk : in bit;
           o : out bit );
end entity d_flip_flop;

architecture behavioral of d_flip_flop is
begin
    dff_behavior : process is
    begin
        if clk'event and clk='1' then
            o <= i;
        end if;
        wait on clk;
    end process dff_behavior;
end architecture behavioral;
```


Three ways to write code in architectures

1. **Structurally:** Instantiate other modules and connect them with signals (≈wires)
2. **Concurrently:** Simple statements (e.g. assignments) that are reexecuted every time signals they depend on change
3. **Sequentially:** Sequential code (possibly in several parallel processes), with loops etc

Higher abstraction levels usually contain more sequential code, while lower levels contain more structural code.

It is possible to mix different kinds of code in the same architecture.

Architecture with Concurrent Code

```
entity half_adder is
    port ( c_in, a : in bit;
           s, c_out : out bit );
end entity half_adder;

architecture behavioral of half_adder is
begin
    s <= a xor c_in;
    c_out <= a and c_in;
end architecture behavioral;
```


Structural architectures: example 1

Assuming that and_gate and xor_gate are implemented:

```
entity half_adder is
    port ( c_in, a : in bit;
           s, c_out : out bit );
end entity half_adder;

architecture structural of half_adder is
begin
    xor1 : entity work.xor_gate(behavioral)
           port map( c_in, a, s );
    and1 : entity work.and_gate(behavioral)
           port map( c_in, a, c_out );
end architecture structural;
```

Structural architectures: example 2

```
entity full_adder is
    port ( c_in, a, b : in bit;
           s, c_out : out bit );
end entity full_adder;

architecture structural of full_adder is
    signal c_1, c_2, s_1 : bit;
begin
    ha1 : entity work.half_adder(structural)
          port map( a, b, s_1, c_1 );
    ha2 : entity work.half_adder(structural)
          port map( c_in, s_1, s, c_2 );
    or1 : entity work.or_gate(behavioral)
          port map( c_1, c_2, c_out );
end architecture structural;
```


Architecture with Sequential Code

```
entity max3 is
    port(i1, i2, i3 : in integer; o : out integer);
end entity max3;

architecture behavioral of max3 is
begin
    p : process is
    begin
        if(i1 >= i2 and i1 >= i3) then
            o <= i1;
        elsif(i2 >= i1 and i2 >= i3) then
            o <= i2;
        else
            o <= i3;
        end if;
        wait on i1, i2, i3;
    end process p;
end architecture behavioral;
```


More on Sequential VHDL

- Sequential code is always written in *processes*
- An architecture may contain several processes
- Processes are implicit loops: when the last statement in a process has been executed, the process is restarted
- Processes communicate using *singals*
- From a language point of view, signals resemble variables (although important differences exist)
- From a hardware point of view, signals resemble wires

Sensitivity lists

```
entity half_adder is
    port ( c_in, a : in bit;
           s, c_out : out bit );
end entity half_adder;

architecture behavioral of half_adder is
begin
    half_add_behavior : process(a, c_in) is
    begin
        s <= a xor c_in;
        c_out <= a and c_in;
    end process half_add_behavior;
end architecture behavioral;
```

Sensitivity lists may not be combined with **wait** statements.

A simple clock generator

```
entity clock1MHz is
    port ( clk : out bit );
end entity clock1MHz;

architecture behavioral of clock1MHz is
begin
    c : process is
    begin
        clk <= '0';
        wait for 500 ns;
        clk <= '1';
        wait for 500 ns;
    end process c;
end architecture behavioral;
```


Time in VHDL

- VHDL has a notion of time
- Simulation time $\neq$ actual running time
- Certain events are scheduled to happen at specific points in time
- Time advances in discrete steps - when nothing more is scheduled to happen at the current point in time, time is advanced to the next point in time where there is a scheduled event.
- Time has two components:
  - a number of (nano/micro/milli)seconds
  - a number of *deltas* (δ)
- The minimal delay for a signal assignment is 1δ.

A small example

```
proc : process is
begin
    a <= 0;
    b <= 0;
    wait for 0 ns;
    a <= a+1;
    b <= a;
    wait for 0 ns;
    -- Here, a=1, b=0 !
    wait;
end process proc;
```


Example: Counting Bits, Attempt 1

```
entity count_ones is
   port( arr : in bit_vector; result : out integer );
end entity count_ones;

architecture attempt_1 of count_ones is
begin
   p1 : process(arr) is
   begin
      result <= 0;
      for i in arr'range loop
         if(arr(i) = '1') then
            result <= result+1;
         end if;
      end loop;
   end process p1;
end architecture attempt_1;
```

Compilation error: *"Cannot read output: result"*

Example: Counting Bits, Attempt 2

```
architecture attempt_2 of count_ones is
  signal tempSum : integer;
begin
  p1 : process(arr) is
  begin
    tempSum <= 0;
    for i in arr'range loop
      if(arr(i) = '1') then
        tempSum <= tempSum+1;
      end if;
    end loop;
    result <= tempSum;
  end process p1;
end architecture attempt_2;
```

Testing reveals strange values on result.

Example: Counting Bits, Correct Version

```
architecture correct of count_ones is
begin
  p1 : process(arr) is
    variable tempSum : integer;
  begin
    tempSum := 0;
    for i in arr'range loop
      if(arr(i) = '1') then
        tempSum := tempSum+1;
      end if;
    end loop;
    result <= tempSum;
  end process p1;
end architecture correct;
```


Simulation cycle

1. Simulation time is advanced until the next scheduled event (can be a signal assignment, or a wait).
2. Scheduled signal assignments are carried out.
3. Processes resume execution if they
   - are sensitive to signals that was affected, or
   - are scheduled to wait until the current time point
4. The processes continue to run until they all reach wait statements. New events that the processes create are put in the event queue. Events to happen after a delay of length 0 are scheduled to happen in the next delta cycle. Events to happen after a positive time are scheduled at that time $+0\delta$.

Variables vs. signals

Variables	**Signals**
Used in algorithms	Represent physical wires
Immediate assignments (**:=**)	Delayed assignments (**<=**)
Belong to a process	Belong to an architecture
Used only within a process	Communicate betw procs/entts
	Different attributes (**'event** etc)
	Sensitivity lists and **wait on**

Example: Variables

```
entity count_pos_edges is
   port (i : in bit; c : out integer);
end entity count_pos_edges;

architecture behavioral of count_pos_edges is
begin
   p1 : process(i) is
      variable counter : integer := 0;
   begin
      if i'event and i='1' then
         counter := counter + 1;
         c <= counter;
      end if;
   end process p1;
end architecture behavioral;
```


Delayed Signal Assignments

- Signal assignments can be delayed:
  - o <= i **after** 2 ns;
  - test_input <= 0,
    1 **after** 1 ms,
    2 **after** 2 ms,
    3 **after** 3 ms;
- The smallest possible clock generator:
  - clk <= not clk **after** 50 us;

  (concurrent assignment)
- The value is evaluated upon execution of assignment statement, not when the assignment is carried out.

Assert statements

- **assert** e;
  Gives a warning if e evaluates to false.
- **assert** e **report** str;
  Prints the message str if e evaluates to false.
- **assert** e **report** str **severity** sev;
- Sev can be one of: note, warning, error, failure.
  Simulator can be set to stop simulation at given severities
- An assert statement in an architecture is concurrent: property should always hold
- An assert statement in a process is sequential: property should hold when the assert is executed

More wait statements

- **wait**; (halts process)
- **wait for** 100 ms;
- **wait on** in1, in2, in3; (wait for *events* on signals)
- **wait until** a='1';
- **wait on** clk **until** reset = '0';
- **wait until** a = '1' **for** 150 ns;

A wait statement *always* causes a process to wait. If we write **wait until** a='1', and a='1', then the process will wait until an event that changes a's value to '1' happens. **Wait for** 0 ns; will cause the process to wait one δ.

More signal attributes

A *transaction* is when a value is assigned to a signal. An *event* is when a transaction causes a signal to change value.

- '**event**: event has occured last (simulation) cycle
- '**active**: transaction has occured last cycle
- '**stable**(t): no event has occured for t time units
- '**quiet**(t): no transaction has occured for t time units
- '**last_value**: value before last event
- '**last_event**: time since last event
- '**delayed**(t): implicit signal, delays the original signal with t time units.

Declaring Your Own Types

- Types are usually declared in packages:

```
package my_types is
  type int_array is array (integer range<>) of integer;
  type int_pair is record
    first : integer;
    second : integer;
  end record;
end package my_types;
```

- Packages must be imported before *all* entities that use them:

```
use work.my_types.all;
```


Guidelines for writing architectures

Processes that are sensitive to the clock signal implicitly introduces flipflops. Architectures usually becomes easiest to write and maintain if they are divided into two parts:

1. One single process which is sensitive only to the clock signal (and possibly an asynchronous reset signal)
2. One or more processes that are sensitive to any input signals or internal signals, except the clock

The only thing the first process does is to update the internal state (i.e. the flipflops). The other parts includes all logic.

More about this in Jiri Gaisler's lecture (next week).